

Steps for installing updated bushing and spring washer

Remove allen screw with 10mm allen wrench. Remove existing bushing. Add replacement bushing and spring washer (1-3). And reinsert and tighten allen screw (4-5).



Steps for installing updated assist arm bracket

Insert updated bracket (1-3). Thread bolt and flat washer into existing threaded hole and tighten with a 17mm wrench or socket (4-5).
Can adjust slotted bracket position for different applications.

