




COOL-SPACE® 400/500

1. Remove retainer bar

Cool-Space 400 (two bolts)

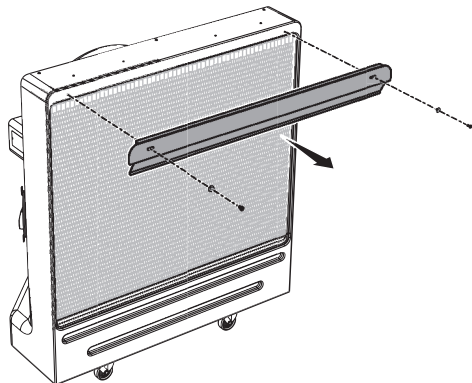


 Cool-Space 500 (four bolts)

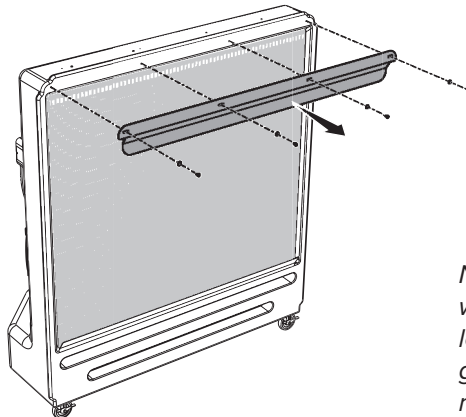

Note: Set the bolts and washers aside in a safe location where they will not get lost. You will use them to reinstall the retainer bar.



2. Remove top pads

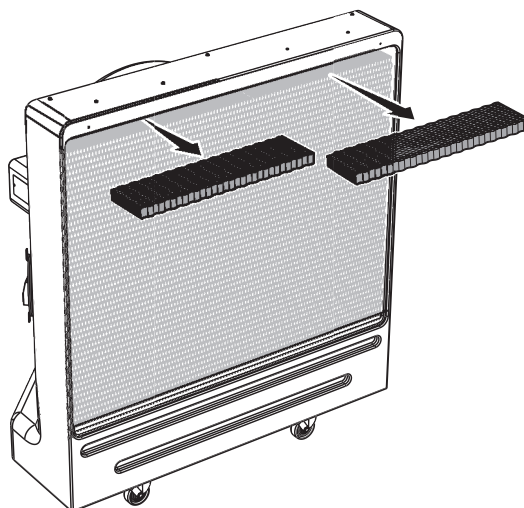

3. Remove center pads


Cool-Space 400: Three center pads

Cool-Space 500: Four center pads

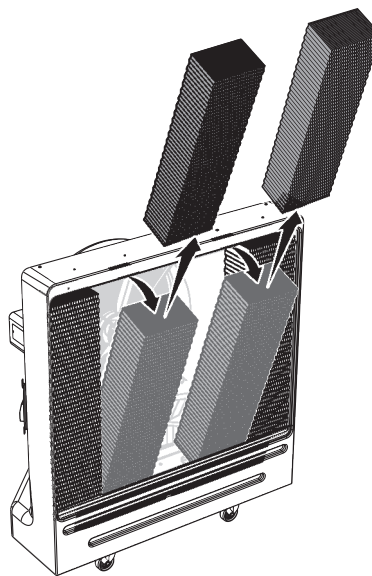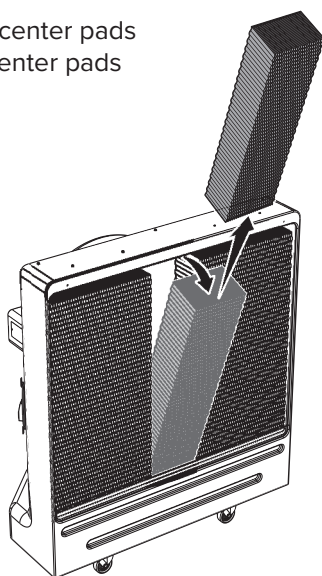

COOL-SPACE® 400/500 (CONT.)

4. Remove side pads

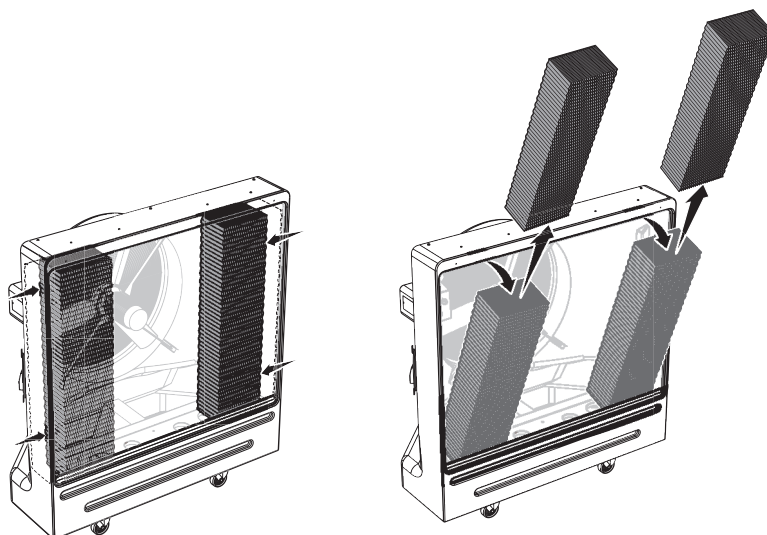


5. Orient and install new side pads

Cool-Space 400: 12 in. x 8 in. x 48 in. (305 mm x 203 mm x 1219 mm) Quantity: 2

Cool-Space 500: 12 in. x 8 in. x 60 in. (305 mm x 203 mm x 1524 mm) Quantity: 2

Note: Side pads and center pads are the same size.

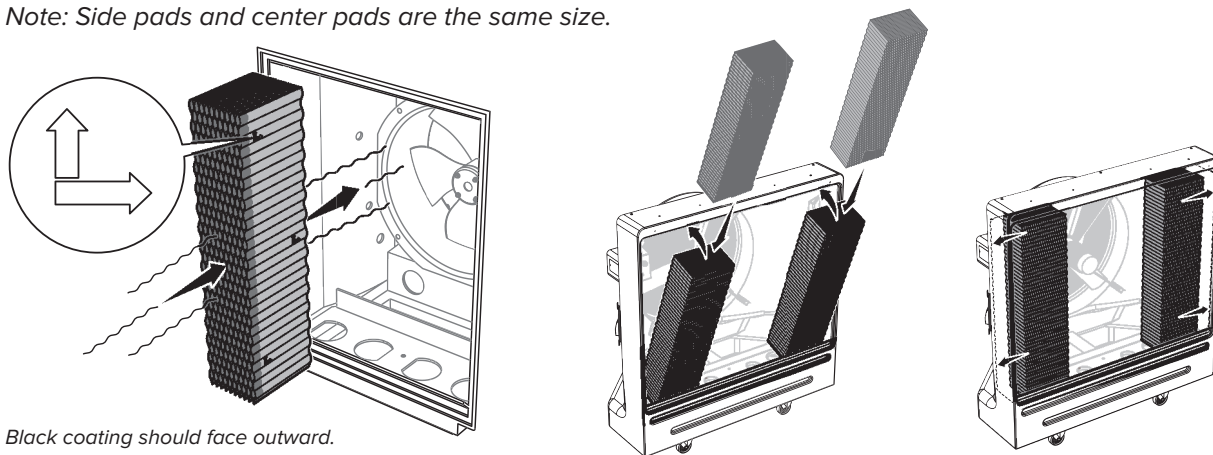


Black coating should face outward.

6. Orient and install new center pads

Cool-Space 400: 12 in. x 8 in. x 48 in. (305 mm x 203 mm x 1219 mm) Quantity: 3

Cool-Space 500: 12 in. x 8 in. x 60 in. (305 mm x 203 mm x 1524 mm) Quantity: 4

Note: Side pads and center pads are the same size.

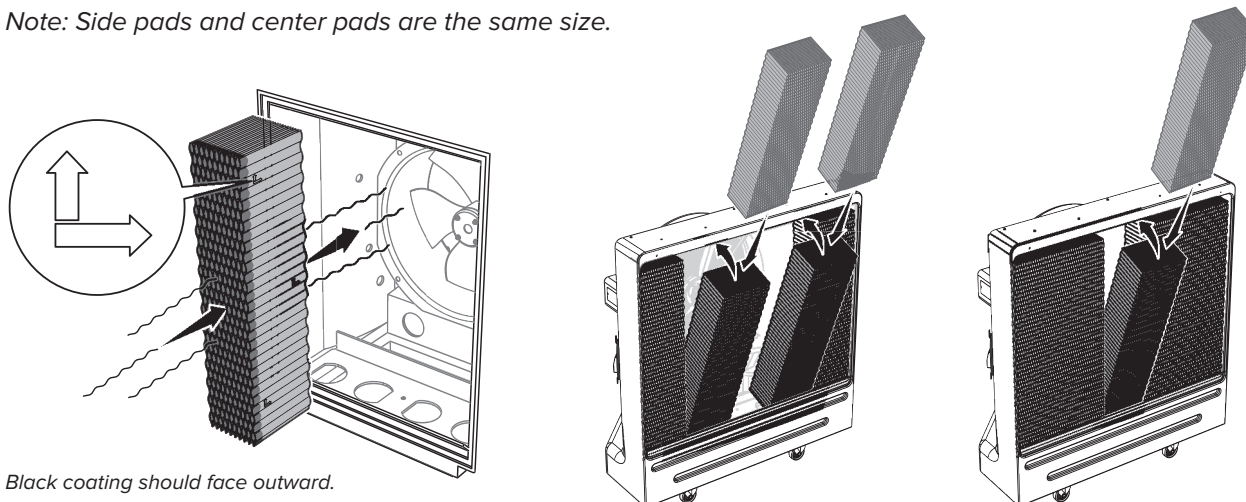


Black coating should face outward.

COOL-SPACE® 400/500 (CONT.)

7. Install new top pads


Cool-Space 400: 30 in. x 8 in. x 1.5 in. (762 mm x 203 mm x 38 mm) Quantity: 2

Cool-Space 500: 36 in. x 8 in. x 1.5 in. (914 mm x 203 mm x 38 mm) Quantity: 2


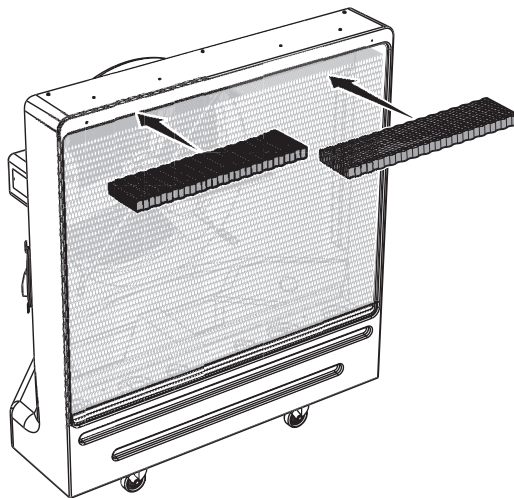


8. Reinstall retainer bar

Cool-Space 400 (two bolts)

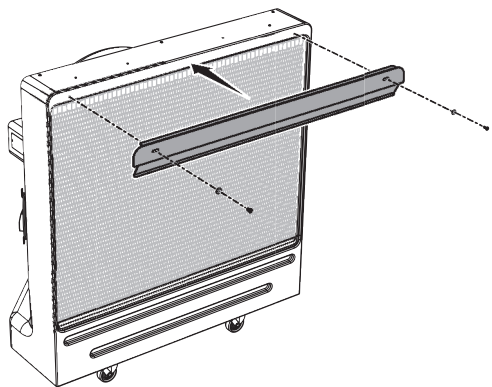

Cool-Space 500 (four bolts)

 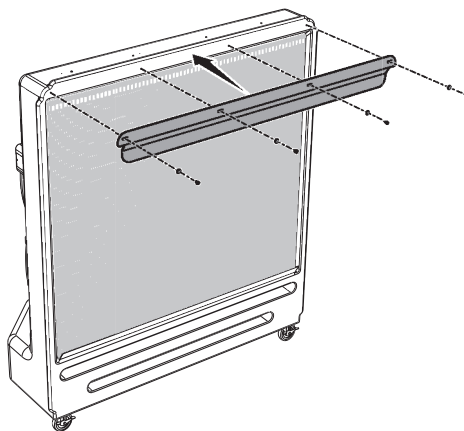

7/16" (11 mm)

**Do not overtighten
bolts.**