

QUICK GUIDE

R³**AC60-AC80**





POWER SUPPLY

The equipment is powered by the mains through a specific power cable.


The equipment must be connected to the mains through the supplied specific power cable; respect the applicable voltage, frequency and power values.

The voltage, frequency and power values that can be applied can be found on the tag located near the main switch.



The mains plug must be used to disconnect from the mains. Do not position the equipment so that it becomes difficult to disconnect it from the mains.

Do not use extension cords to power the equipment.

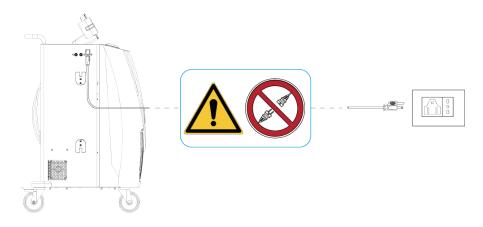


Proceed as follows:

- 1. Go to the left side of the equipment.
- 2. Connect the power cable to the mains via a grounded socket.

12 POWER ON/OFF

The equipment can be powered on and off using the main switch located on the left side of the charging station.

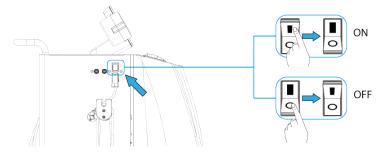

To turn on the equipment, set the main switch to the I (ON) position.

To turn off the equipment, set the main switch to the **O** (OFF) position.



Do not disconnect the equipment from the mains by unplugging the power cable either from the equipment or from the socket.

12.1 Stopping the Equipment for Long Periods


If you need to stop the equipment for a long period of time, follow the instructions below. Proceed as follows:

- 1. Disconnect the equipment from the mains.
- 2. Place the provided cover over the equipment.
- 3. Store the equipment in a safe place, not exposed to outside weather conditions.

R3AC60 - R3AC80





2a - VEHICLE SELECTION / SELEZIONE VEICOLO / SÉLECTION DE VÉHICULE / SELECCION VEHICULO

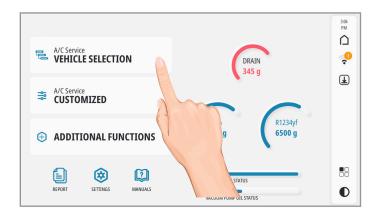





Smart Selection / Selezione Intelligente / Sélection intelligente / Selección Inteligente

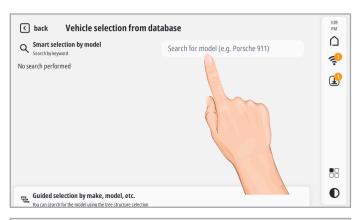

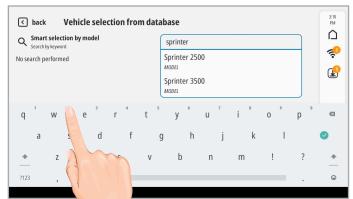

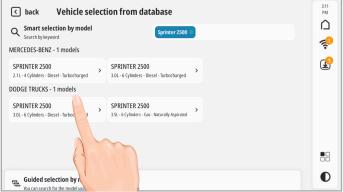

∢ back	Vehicle selection	on from database		3:12 PM
	No ad	ditional filters found for this selection	on	₹ -
Regio Refr. (g		NA R134a (1200 g) NA R134a (11	CONTINUE	•••

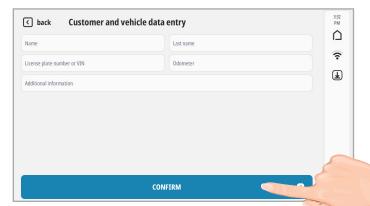



R3AC60 - R3AC80



0

AM GENERAL


CADILLAC

CHEVROLET

DAF

EAGLE

Guided Selection / Selezione Guidata / Sélection guidée / Selección Guiada

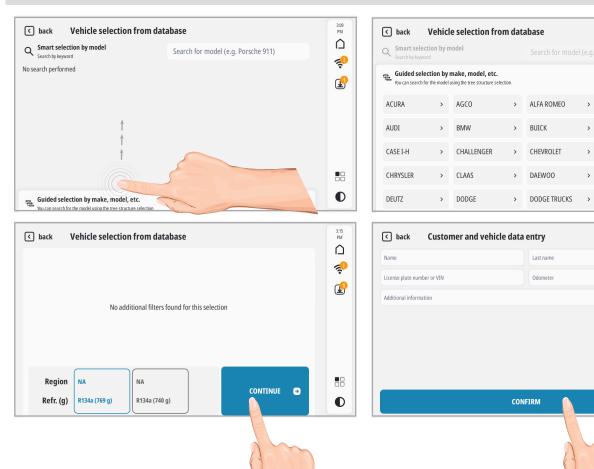

2b - CUSTOMISED / PERSONALIZZATO / PERSONALIZADO




Name	Last name	Ω
License plate number or VIN	Odometer	€
Additional information		Ŧ
		•



R3AC60 - R3AC80




3. START SERVICE / AVVIA SERVIZIO / DÉMARRER LE SERVICE / INICIAR SERVICIO

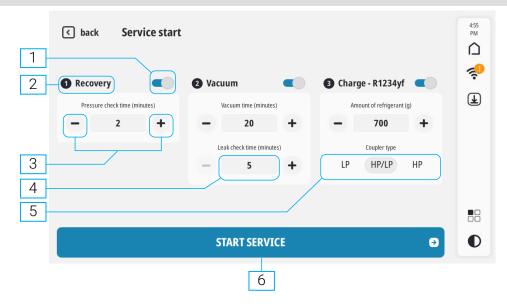

- 1. Phase selection / deselection / Selezione / deselezione fase / Sélection / désélection de phase / Selección / deselección fase
- 2. Phase / Fase / Phase / Fase
- 3. Decrease / increase / Decrementa / incrementa / Décroissance / incrémentation / Disminuye / aumenta
- 4. Quantity (editable field) / Quantità (campo editable) / Quantité (champ éditable) / Cantidad (campo editable)
- 5. Multiple-choice fields / Campi a scelta multipla / Champs à choix multiples / Campos de selección múltiple
- 6. Start service / Avvia servizio / Démarrer le service / Iniciar servicio

ADDITIONAL FUNCTIONS / FUNCIONI ADDIZIONALI / FONCTIONS ADDITIONNELLES / FUNCIONES ADICIONALES



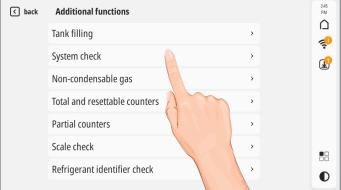

- · Riempimento serbatoio / Tank filling / Remplissage du réservoir / Llenado depósito
- · Verifica impianto / System check / Vérification système / Verificación sistema
- · Gas incondensabili / Non-condensable gas / Gaz incondensables / Gases incondensables
- Contatori totali e resettabili / Total and resettable counters / Compteurs totaux et à réinitialiser / Contadores totales y reseteables
- · Contatori parziali / Partial counters / Compteurs partiels / Contadores parciales
- · Controllo bilancia / Scale check / Contrôle balance / Control balanza
- Verifica identificatore refrigerant / Refrigerant Identifier Check / Vérification de l'identificateur du réfrigérant / Verificación Identificador Refrigerante

Trained Operators and Regular Maintenance Ensures Satisfactory Performance of Your Rotary Shop Equipment.

Replacement Parts: See installers package for parts breakdown sheet. Order Genuine Rotary replacement parts from your nearest Authorized Parts Distributor.

Maintenance Assistance: Contact your local Rotary distributor.

Should further assistance be required, contact Rotary, at one of the phone numbers listed below.



Rotary World Headquarters

3005 Highland Parkway, Suite 200 Downers Grove, Illinois 60515, USA www.vsgdover.com 800.640.5438

North / South America Contact Information

Sales:

1.812.273.1622 / 800.445.5438 insidesales@vsgdover.com **Tech. Support:** 800.445.5438

technicalsupport@rotarylift.com

Government Sales:

800.445.5438 X5655

rotarylift.com/Government-Purchasing-Assistance/

Additional information at rotarylift.com

Global Contact Information

Australasia: +60.3.5192.5910 Brazil: +55.11.4534.1995

Canada: 1.905.812.9920

Latin America/Caribbean: 1.812.273.1622 Middle East/Northern Africa: +49.771.9233.0

European Headquarters/Germany: +49.771.9233.0

Southern Africa: 1.812.273.1622 United Kingdom: +44.178.747.7711

