




ML41

Crossbeam Kit

IMPORTANT

This is only a supplement to the Operation Manuals shipped with your lift. Not intended to be a comprehensive Operation and Safety overview.

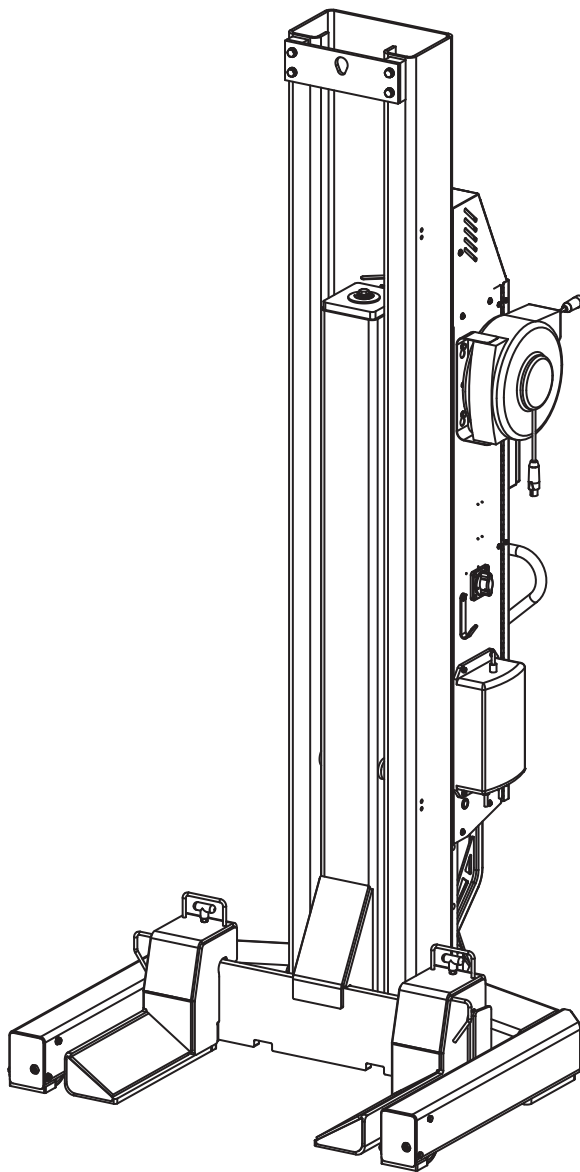

Push crossbeam adapter into desired position under vehicle.

Push Lift under adapters ends, Fig. 1. Push in as far as you can.


Raise crossbeam and adjust adapters to contact the frame at proper lifting point. Adapters need to be equally spaced off each lift and Frame should be centered between lifts to help prevent offset loading. Ensure adapters have proper frame engagement.

Operation/Usage: Never raise just one end of the vehicle.

Never exceed rated capacity: 32,000 lbs. at 72" adapter spread. 24,000 lbs. at 49" adapter spread.

Operate lifts. Always use safety stands as needed or when installing or removing heavy components.

Refer to operating instructions supplied with lift for proper lifting procedures.

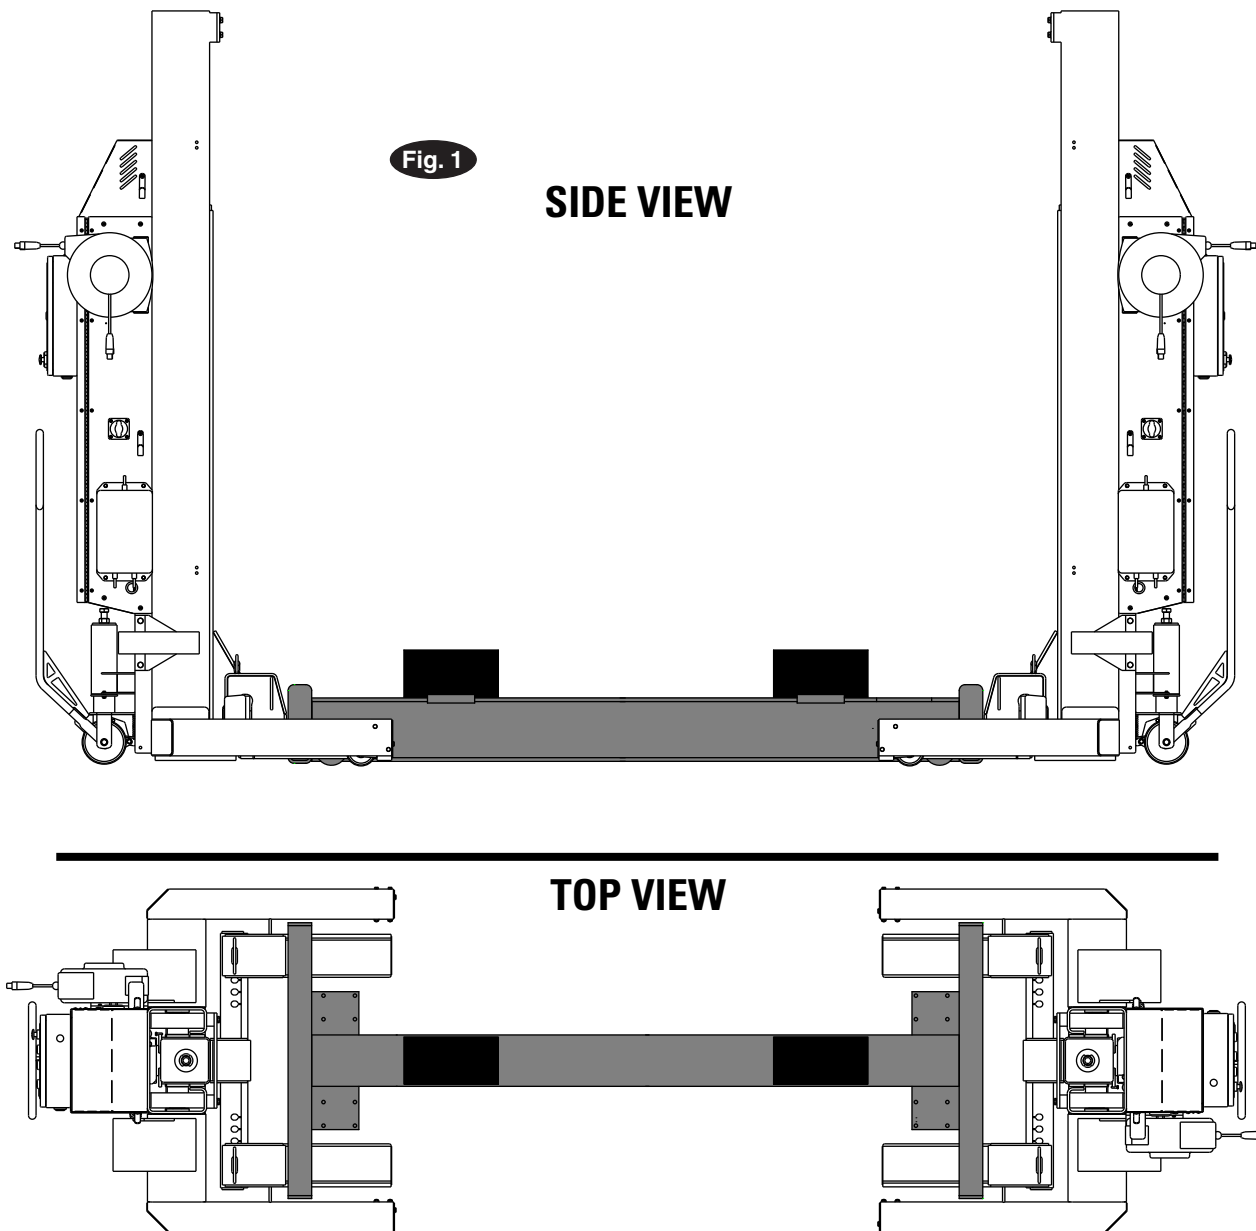

Rotary World Headquarters

2700 Lanier Drive
Madison, IN 47250, USA
www.rotarylif.com

North America Contact Information

Tech. Support: p 800.445.5438
f 800.578.5438
e userlink@rotarylif.com
Sales: p 800.640.5438
f 800.578.5438
e userlink@rotarylif.com

World Wide Contact Information

World Headquarters/USA: 1.812.273.1622
Canada: 1.905.812.9920
European Headquarters/Germany: +49.771.9233.0
United Kingdom: +44.178.747.7711
Australasia: +60.3.7660.0285
Latin America / Caribbean: +54.3488.431.608
Middle East / Africa: 1.812.273.1622



A **DOVER** COMPANY

