



OH-10 width ext install instructions


1、width extension kit :

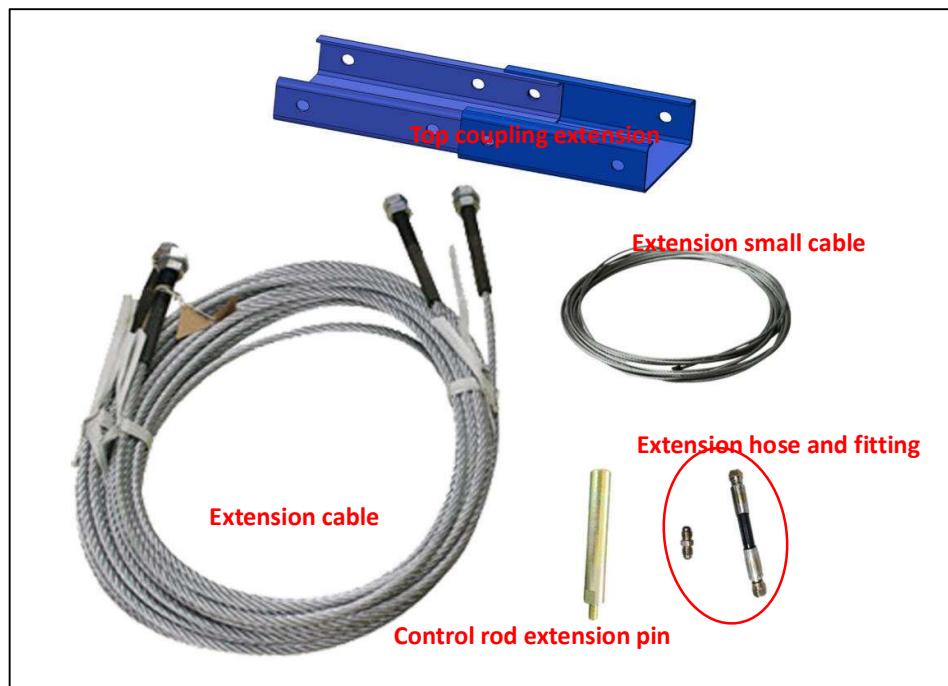


2、Install dimension:

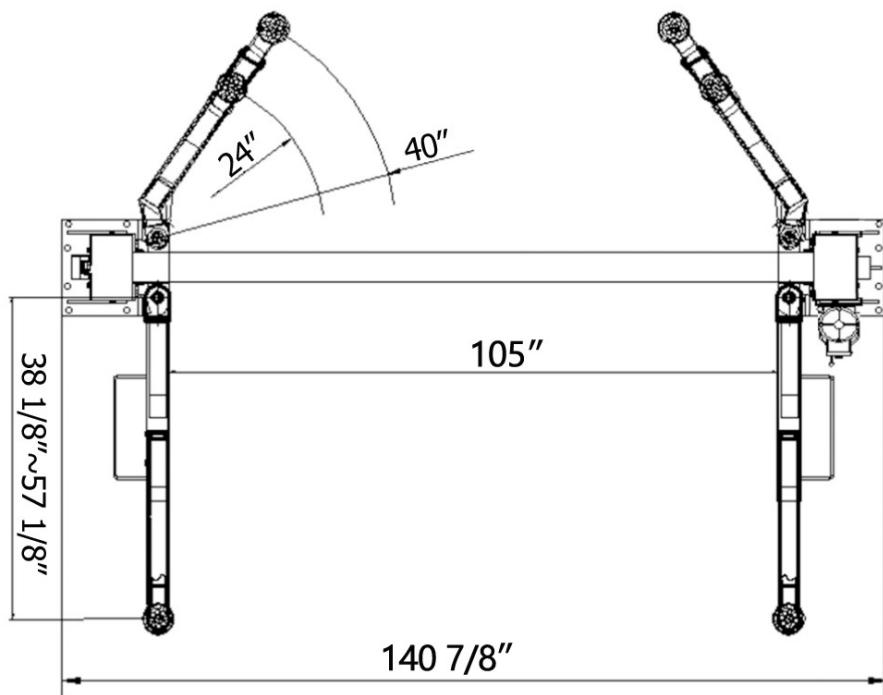

3、Install extension cable: (raise the carriage to the same level of safety position)

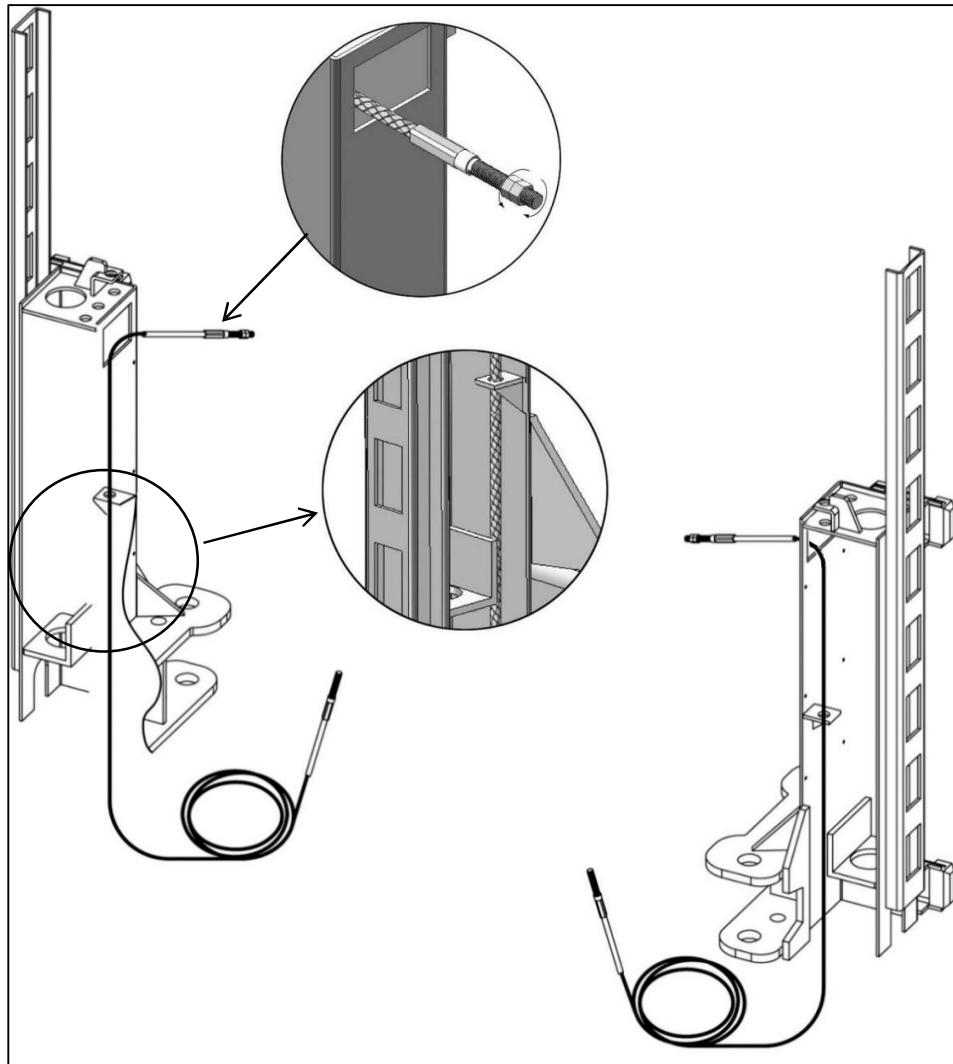

4、Install the Top coupling extension kit and install the control rod extension pin:

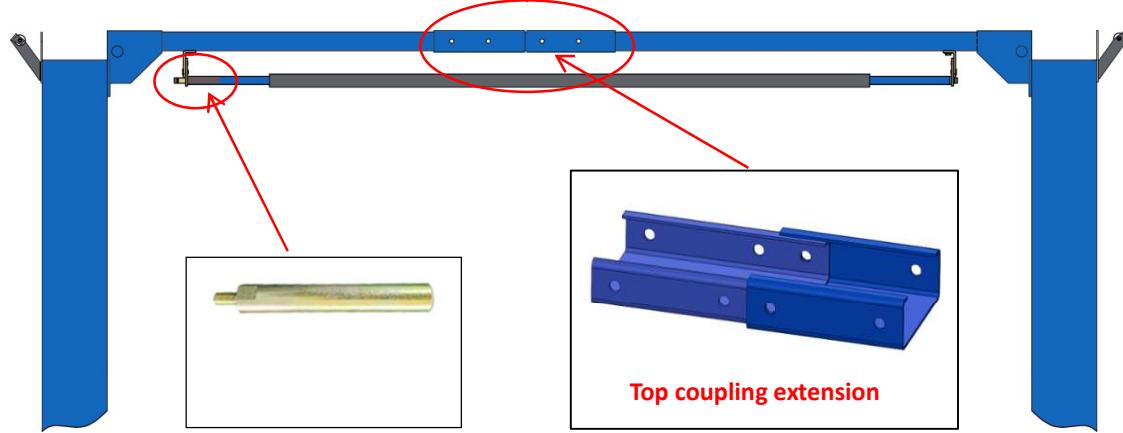

5、Connect the extension hose with the fitting and install the extension small cable:

